DRAWING ONE

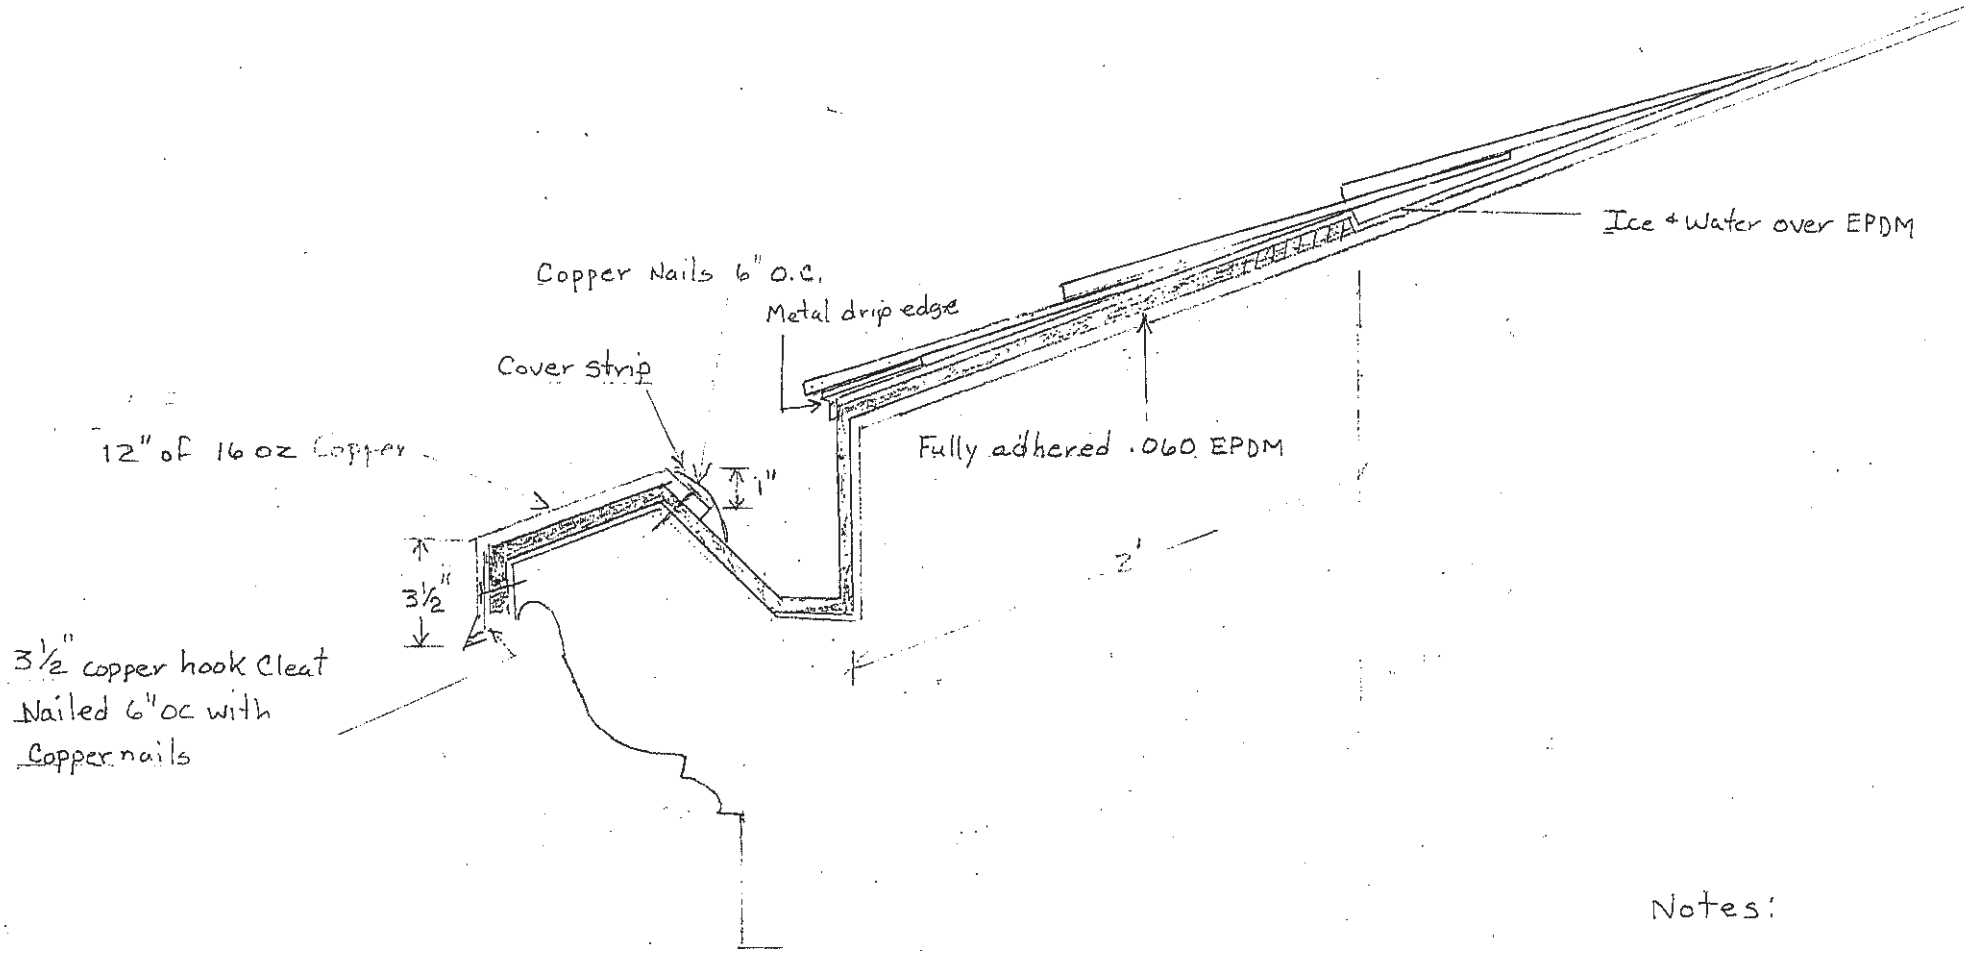

Notes:

Use Carlisle low VOC yellow Glue
Ice dam membrane to be installed from drip edge 6' up roof and in all valleys.
EDPM shall be layed in glue fully rolled with No wrinkles using one 4' sheet No joints
Copper to have no horizontal seams
all vertical seams are to be welded
Roll EDPM primer on back side of 6" cured Cover strip to continously cover copper flashing edge and Nails in gutter and fully roll to adhere.

R.S. 2014